

## Door trim

### Front door trim driver side, removing and installing


#### **CAUTION!**

***Before working on the electrical system disconnect battery Ground strap***

#### Removing


##### **Notes:**

- ◆ *Before disconnecting the battery, obtain radio anti-theft code.*
- ◆ *Since the separating joint is very tight, in order not to damage trim and handle well, use a pointed screwdriver.*
- ◆ *When removing handle well do not reach in, since door trim is fastened to strut underneath.*

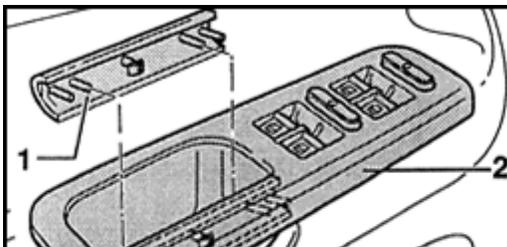


A


- Insert small screwdriver in lower separating joint between trim -1- and handle well -2- and carefully press off in direction of door trim.

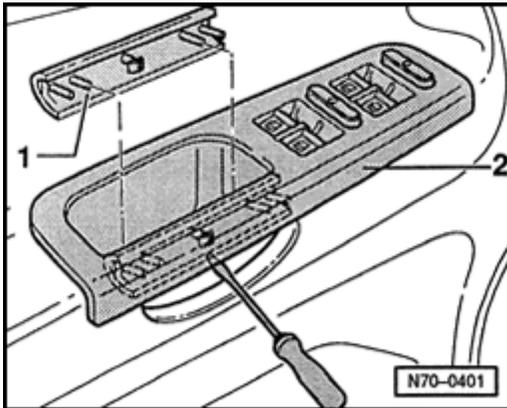


- A - Unclip handle well-2- upward out of trim.

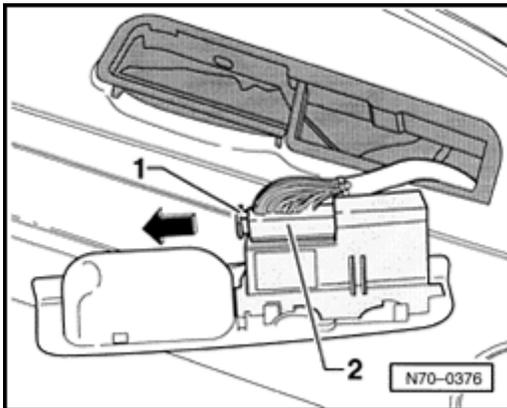


- A - Pull lock -1- in direction of arrow and remove connector -2-.

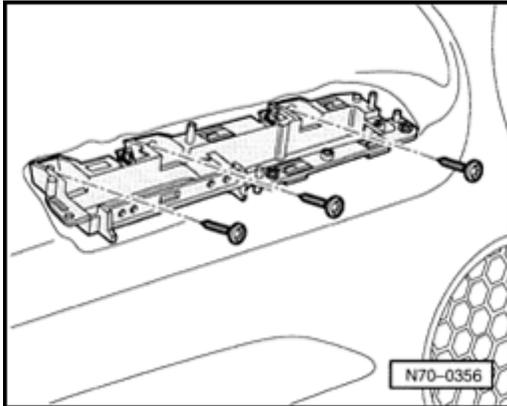

- A - Unscrew 3 Phillips-head screws.

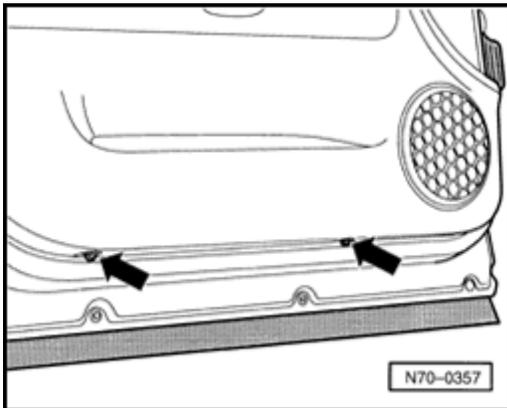


- A - Unscrew bolts (arrows)

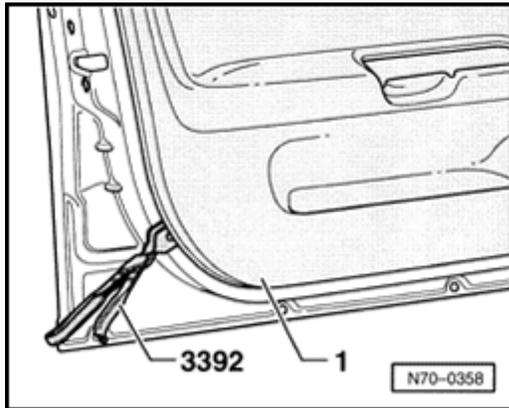

A

- Unclip door trim -1- with aid of tool 3392 on the sides.
- Raise door trim upward out of window channel.

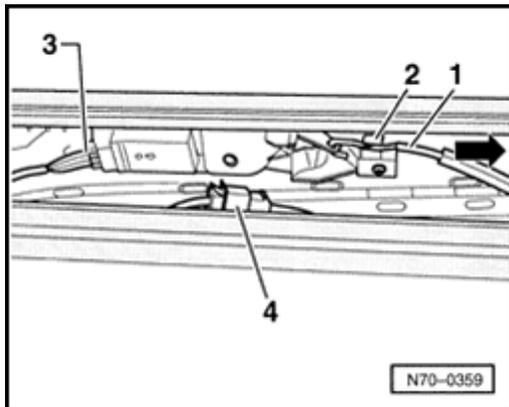

A

- Pull cable -1- out in direction of guide -2- and unhook.
- Disconnect connectors -3- and -4-.




## Installing

A

- Remove window channel seal -1- from door trim and install in window channel.

### Notes:

- ◆ *Before installing the door trim check clips and if necessary replace.*
- ◆ *After connecting the battery make sure that the vehicle equipment (radio, clock and power window regulators) are checked according to repair manual and/or operating instructions.*

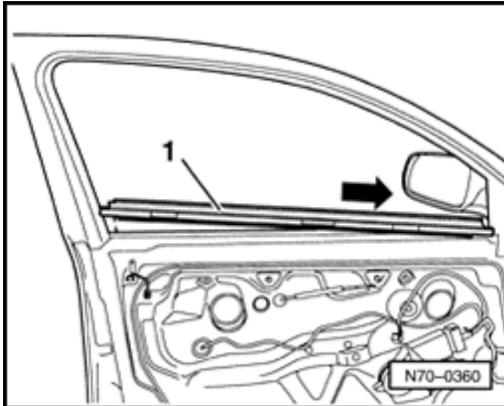



## Front door trim passenger side, removing and installing


### **CAUTION!**

**Before working on electrical system:  
disconnect battery Ground strap.**

### Removing


#### Notes:

- ◆ *Before disconnecting the battery, obtain radio anti-theft code.*
- ◆ *In order to avoid damage to door trim, place plastic spatula -2- between screwdriver and door trim.*

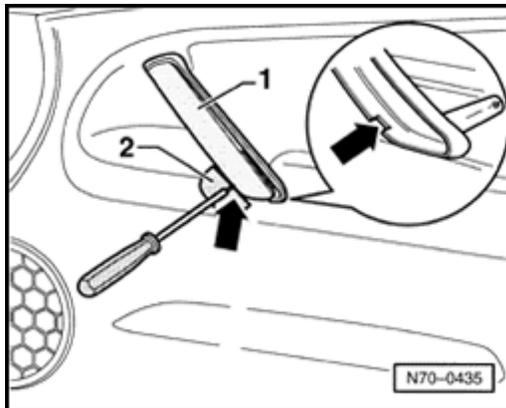

A

- Guide screwdriver (max. 5 mm wide) in the opening on the bottom side of the door inner handle (arrow), turn and pry trim -1- out.

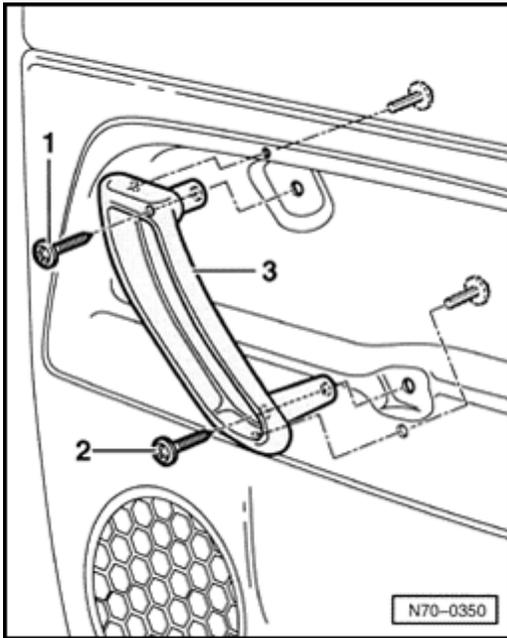


A

- Unscrew bolts -1- and -2-.


**Note:**

*Door interior handle -3- is bolted to door trim and can only be removed with door trim removed.*

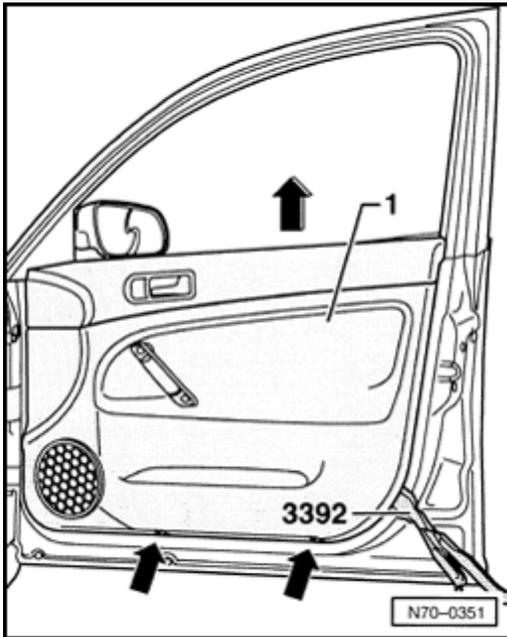

A

- Unscrew bolts (arrows)
- Unclip door trim -1- with aid of tool 3392 on the sides.
- Raise door trim upward out of window channel.

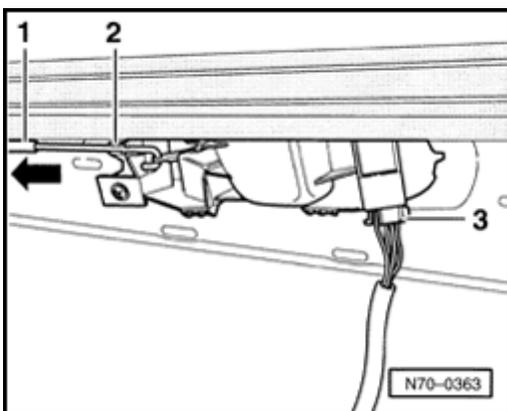

A

- Pull cable -1- out in direction of guide -2- and unhook.
- Disconnect connector -3-.




## Installing

A

- Remove window channel seal -1- from door trim and install in window channel.

### Notes:

- ◆ *Before installing the door trim check clips and if necessary replace.*
- ◆ *After connecting the battery make sure that the vehicle equipment (radio, clock and power window regulators) are checked according to repair manual and/or operating instructions.*

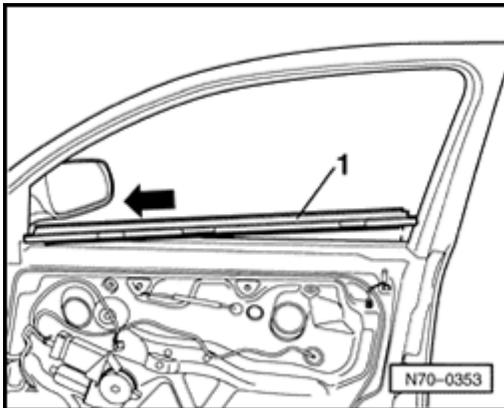



## Rear door trim, removing and installing


### **CAUTION!**

**Before working on electrical system:  
disconnect battery Ground strap.**

### Removing


#### Notes:

- ◆ *Before disconnecting the battery, obtain radio anti-theft code.*
- ◆ *In order to avoid damage to door trim, place plastic spatula -2- between screwdriver and door trim.*

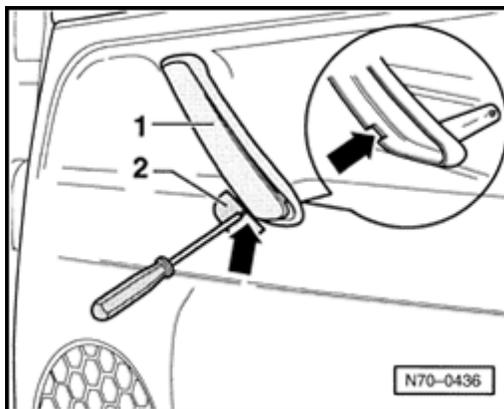

A

- Guide screwdriver (max. 5 mm wide) in the opening on the bottom side of the door inner handle (arrow), turn and pry trim -1- out.

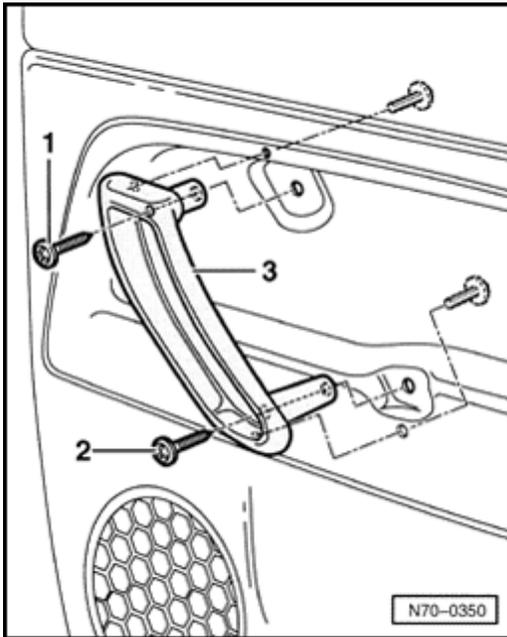


A

- Unscrew bolts -1- and -2-.


**Note:**

*Door interior handle -3- is bolted to door trim and can only be removed with door trim removed.*

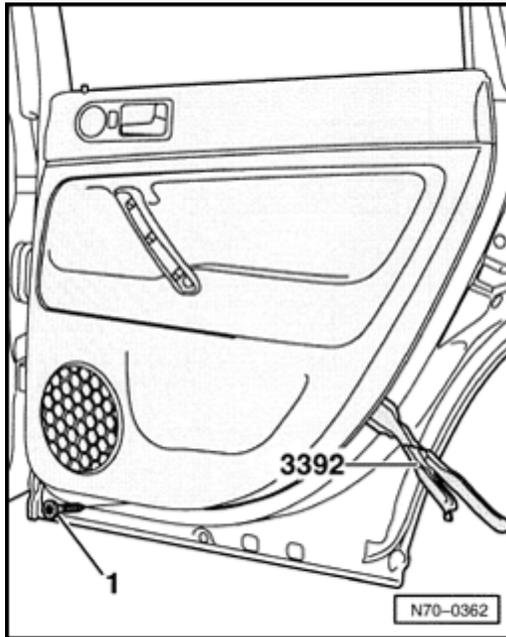


A

- Unscrew bolt -1-
- Unclip door trim with aid of tool 3392 on the sides.
- Raise door trim upward out of window channel.

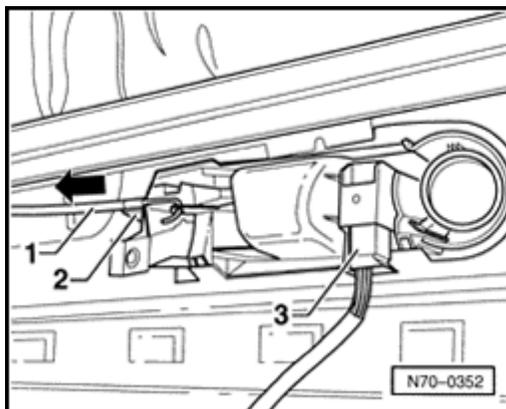

A

- Pull cable -1- out in direction of guide -2- and unhook.
- Disconnect connector -3-.

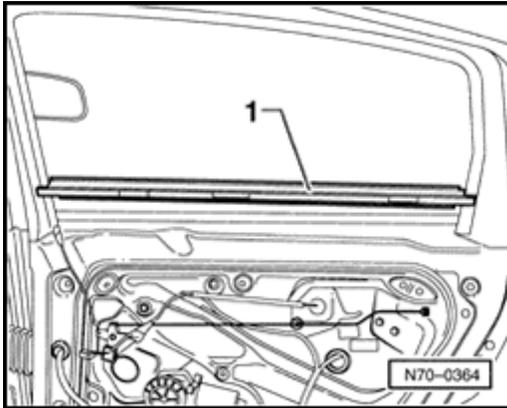

## Installing

A

- Remove window channel seal -1- from door trim and install in window channel.

### Notes:

- ◆ *Before installing the door trim check clips and if necessary replace.*
- ◆ *After connecting the battery make sure that the vehicle equipment (radio, clock and power window regulators) are checked according to repair manual and/or operating instructions.*